002-204 PGB Harness Instructions

- Ford Super Duty W 4 & 8 Inch Screens, 2017-2025
- Ford F150 – 2015-2020

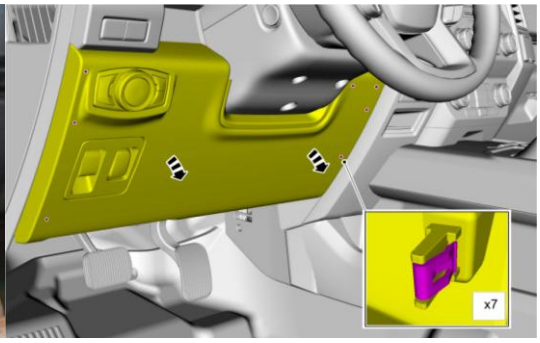

Pull the knee panel (shown above in yellow) down. Remove the 4 bolts (circled in blue) and remove the metal plate.

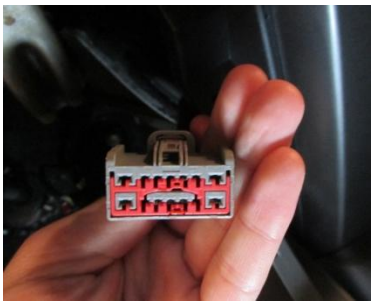
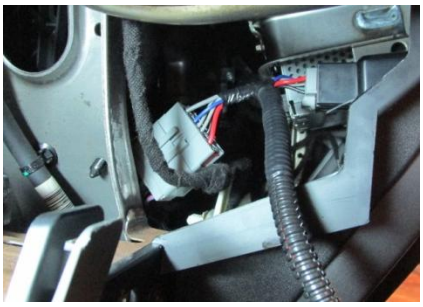

With the plate removed, plug the T-harness in.

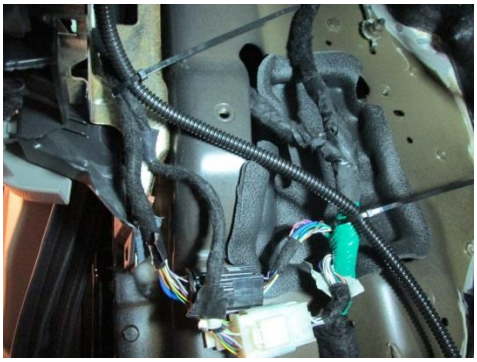

002-204 PGB Harness Instructions

- Ford Super Duty W 4 & 8 Inch Screens, 2017-2025
- Ford F150 – 2015-2020

Route the harness across the ledge and down behind the kick panel.

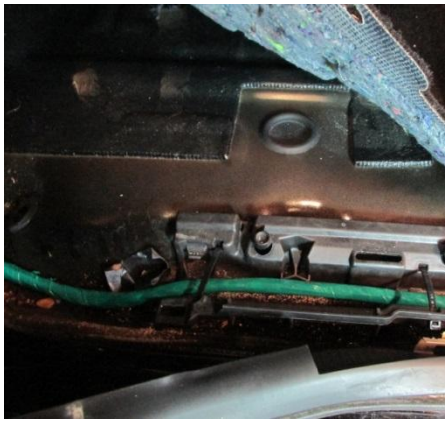

Using the grommet hole under the driver's floor carpet, route the main harness up to the kick panel. Plug the terminals into the 3-pin connector to match the T-harness' 3-pin connector pinout and plug the connectors together. Once the system functionality has been confirmed, reinstall the carpet and interior trim pieces.

F-150 Fuse Note

If the system isn't powering up properly on a F150, check the engine bay fuse box. If Fuse Number 24 (location circled in blue) is missing, place a 30amp fuse in its place and check if the problem has been fixed.