


006-203 Power Break and Ground Harness Install


Ram 2015-2025 RAM 1500/2500/3500 Installation Instructions

Please note that the trucks with factory break controller and without have slightly different locations these are indicated below.

1. Disconnect and isolate the negative battery cable.
2. Remove knee bolster on driver side.
3. Remove the 2-7mm fasteners (1) that secure the bottom of the knee bolster Using a trim stick or equivalent, disengage the retainer clip that secures the hood release to the steering column opening cover (2).
- 4.

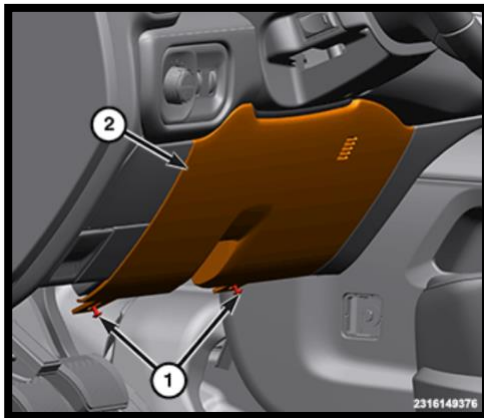

5. Using a trim stick or equivalent, release the retainer clips that secure the steering column opening cover (1) to the instrument panel and lower the cover.

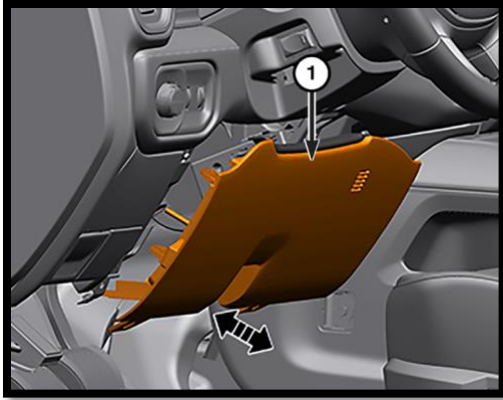

6.

7. Using best practices (clean shop towel or other protective equipment) to ensure no damage to trim, lower knee bolster to access opening.





Factory Break Controller free plug Connector

8. For trucks with out factory break controller Locate free connector which is taped to the a harness above right dash brace (if sitting in the drivers seat it is located at the 1 Oclock position above right knee) on factory harness *see pictrure for location.
9. Connect 006-203 Power Break and Ground harness



10. If vehicle is equipped with factory break controller Disconnect the number (2) wire harness connector from the Integrated Trailer Brake Module.

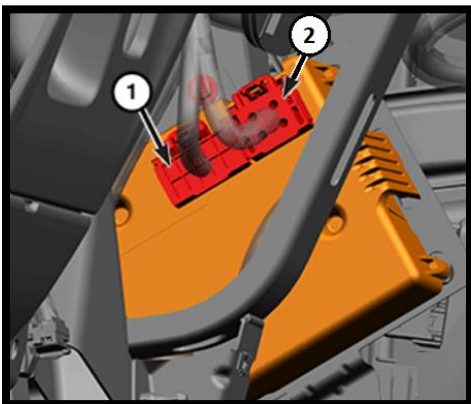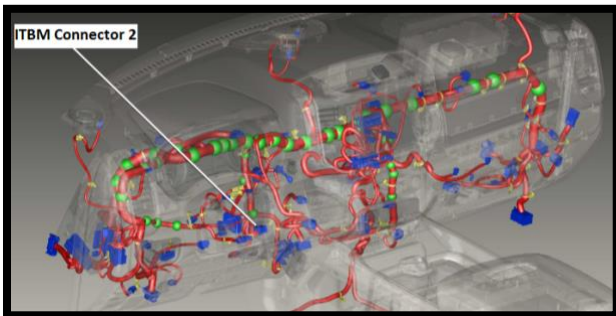

11. Plug the 006-203 T-Harness into connector 2 and into the Integrated Trailer Brake Module.



12. Route the extension harness to the 006-203 harness and plug the white 3-pin connectors together.
13. Secure the extension harness and the 006-203 with zip ties, to ensure no rattling or possible interference with pedals, to existing trim panels and OEM wiring harnesses.
- 14.